


# Installation Procedure

Ensure that power is turned off before installation.


Unload the screw and pull out the plastic end cap, move out the PC cover

Take off the aluminum heatsink

①

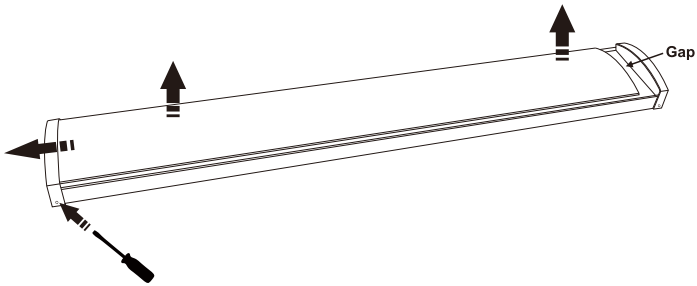


②

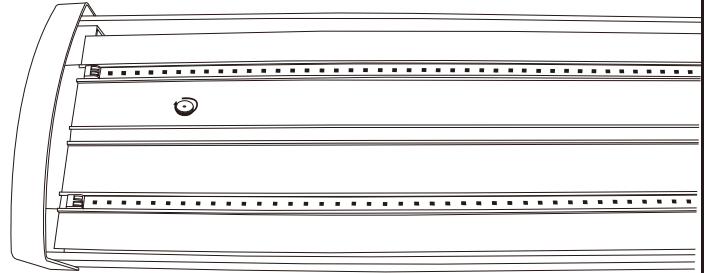


Screw the housing to the ceiling

Connect the power supply to the terminal block

③

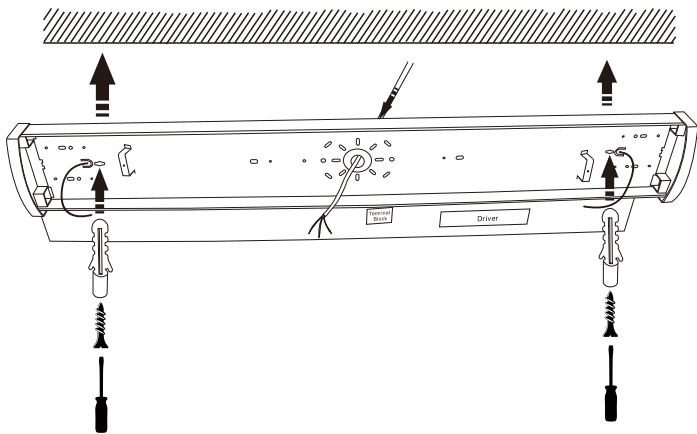


④

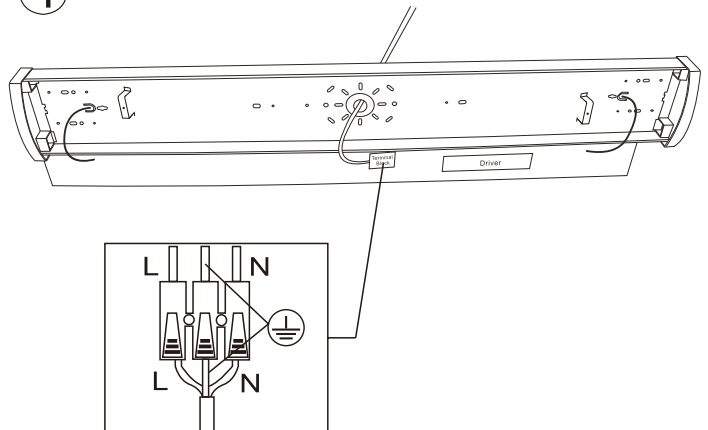

Re-install the aluminum heatsink to the housing

Re-install the PC cover and the plastic end cap, re-install the screw to fix

⑤

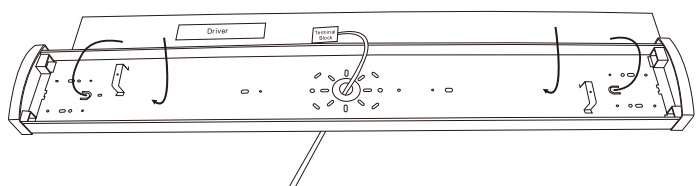

⑥

