



Drywall Series

ALP081-R


Installation methods

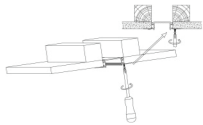


Step 01:
Fix the profile on plasterboard



Step 04:
Stick led strip



Step 02:
Painting the Plaster




Step 03:
Paint lacquer(overcoating)




Step 05:
Install diffuser

ALP082


Installation methods

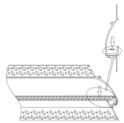


Step 01:
Stick led strip




Step 04:
Paint lacquer(overcoating)

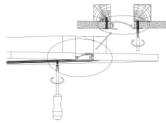

Step 02:
Fix the profile on plasterboard




Step 03:
Painting the Plaster





Step 05:
Install diffuser

Drywall Series

ALP084




End caps

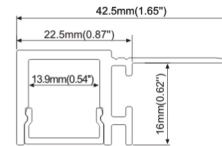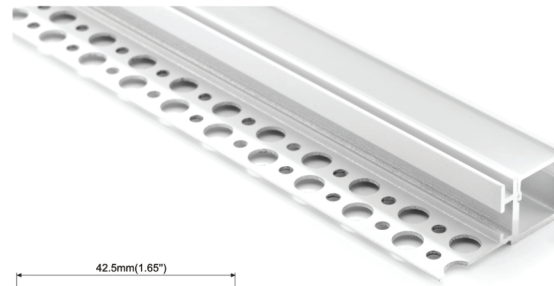


• PC diffused cover

ALP085



End caps




• PC diffused cover

ALP086



End caps




• PC diffused cover

Drywall Series

ALP087




End caps

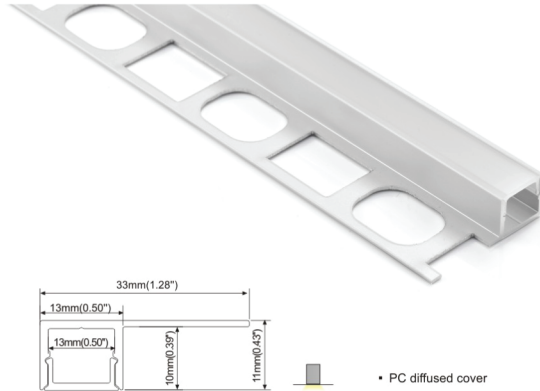

ALP088




End caps

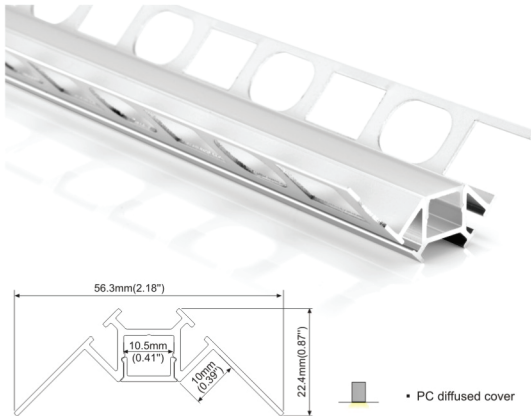

ALP089




End caps

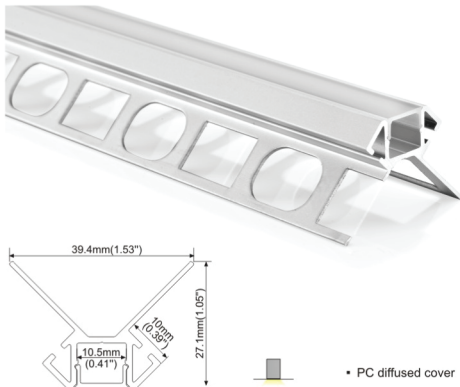


Drywall Series

ALP088


Installation methods

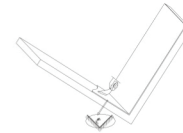


Step 01:
Painting cement mortar

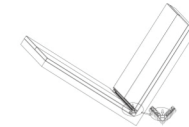


Step 04:
Stick led strip

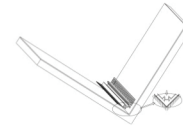

Step 02:
Put the profile inside the corner

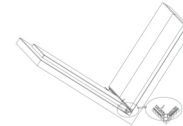


Step 03:
Stick the tile

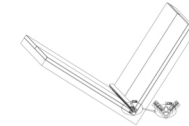


Step 05:
Install diffuser

ALP089


Installation methods




Step 01:
Painting cement mortar




Step 04:
Stick led strip



Step 02:
Put the profile inside the corner





Step 03:
Stick the tile



Step 05:
Install diffuser

Drywall Series

ALP078

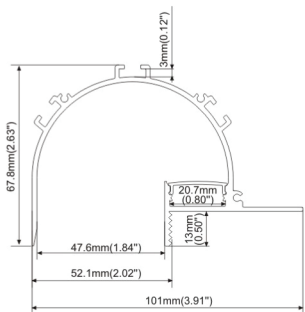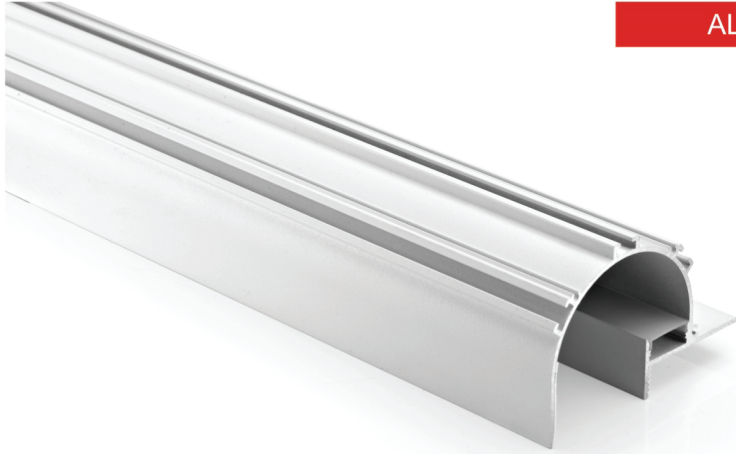

• PMMA semi-clear cover



End caps






Clip1



Clip2

Drywall Series

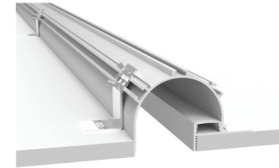

Step 01:
Stick led strip




Step 02:
Push the diffuser inside




Step 03:
Fix the frame on profile



Step 04:
Fix end caps



Step 05:
Fix the whole profile
on wooden frame






Step 06:
Install the ceiling
plasterboard



Step 07:
Paint the plaster



Step 08:
Paint lacquer
(overcoating)

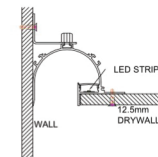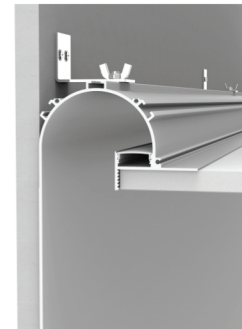

Step 01



Step 02



Step 03




Step 04




Step 05



Step 06



Step 07




Step 08




Step 09

Drywall Series


ALP090

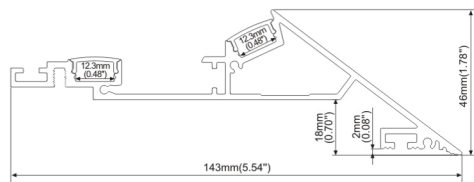


• PMMA semi-clear cover




End caps

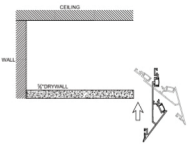


Step 01

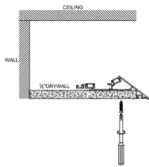

Step 02

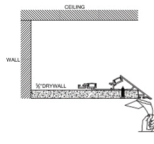


Step 03

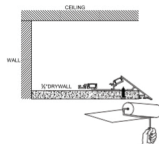


Step 04

Drywall Series

ALP091-E

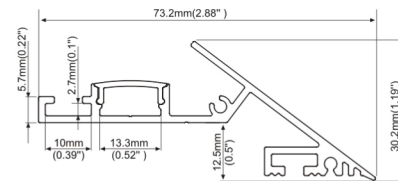

• PMMA semi-clear cover








End caps

Drywall Series



ALP081-R

Installation methods

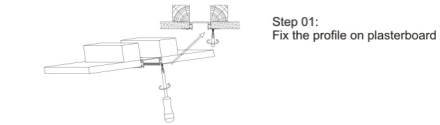



ALP082

Installation methods

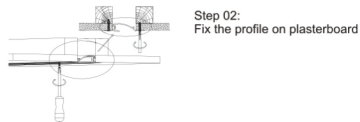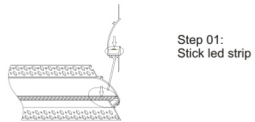


Drywall Series


ALP084

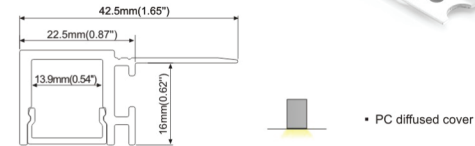

ALP085

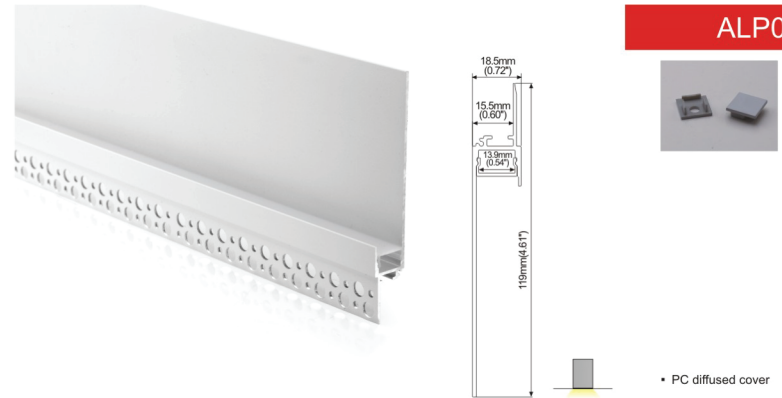

ALP086

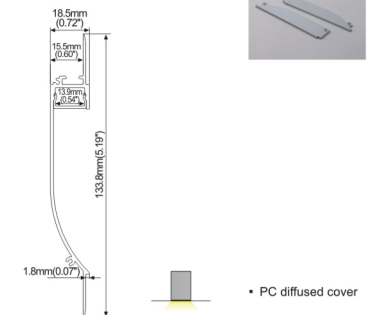


Drywall Series

ALP087




End caps

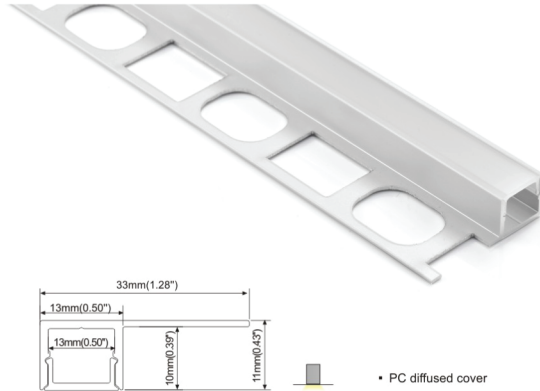

ALP088




End caps

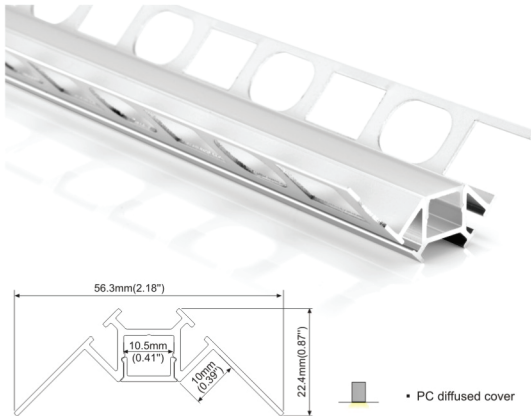

ALP089




End caps

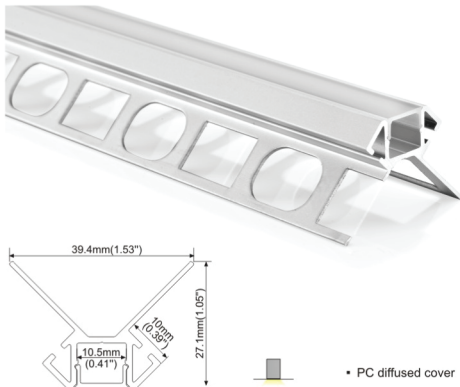


Drywall Series

ALP088


Installation methods

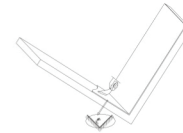


Step 01:
Painting cement mortar

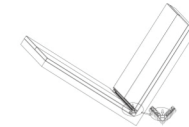


Step 04:
Stick led strip

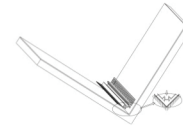

Step 02:
Put the profile inside the corner

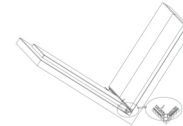


Step 03:
Stick the tile

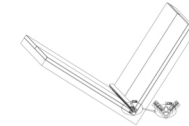


Step 05:
Install diffuser

ALP089


Installation methods




Step 01:
Painting cement mortar




Step 04:
Stick led strip



Step 02:
Put the profile inside the corner





Step 03:
Stick the tile



Step 05:
Install diffuser

Drywall Series

ALP078

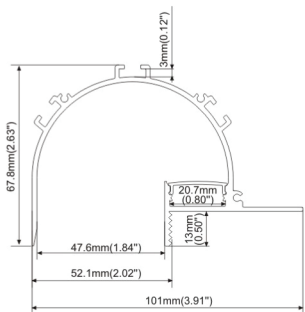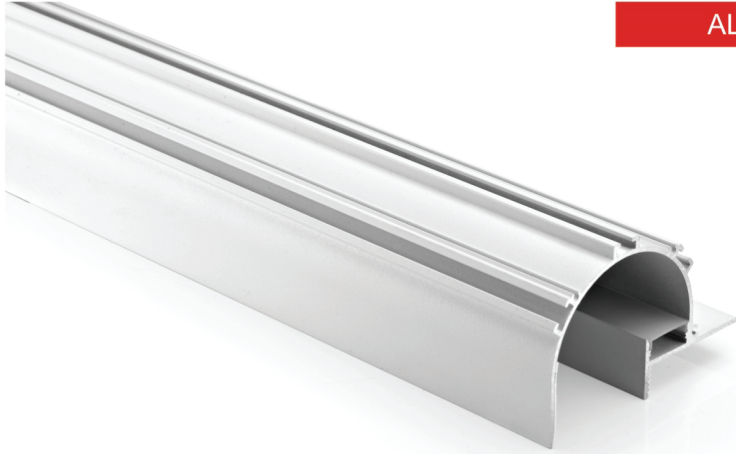

• PMMA semi-clear cover



End caps






Clip1



Clip2

Drywall Series

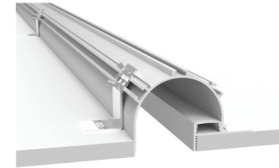


Step 01:
Stick led strip




Step 02:
Push the diffuser inside




Step 03:
Fix the frame on profile



Step 04:
Fix end caps



Step 05:
Fix the whole profile
on wooden frame





Step 06:
Install the ceiling
plasterboard



Step 07:
Paint the plaster



Step 08:
Paint lacquer
(overcoating)

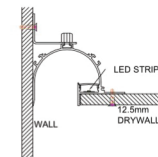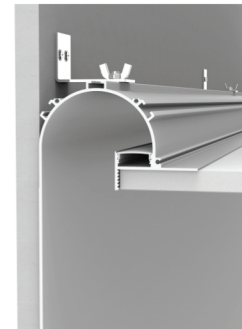

Step 01




Step 02



Step 03




Step 04




Step 05



Step 06



Step 07




Step 08



Step 09

Drywall Series


ALP090

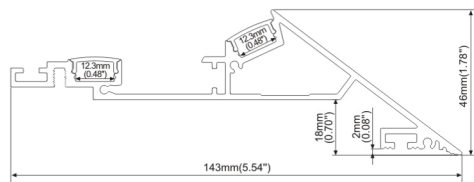


• PMMA semi-clear cover




End caps

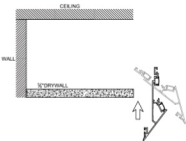


Step 01

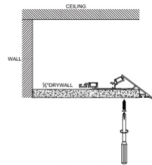

Step 02

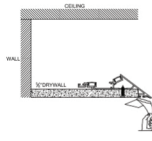


Step 03

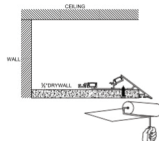

Step 04

Drywall Series

ALP091-E

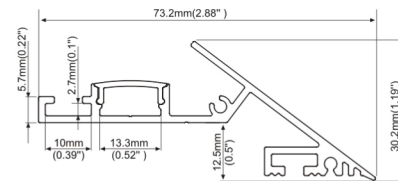


• PMMA semi-clear cover



End caps

Drywall Series

ALP092

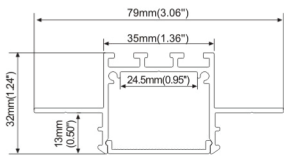

• PC diffused cover




End caps



Drywall Series

ALP093

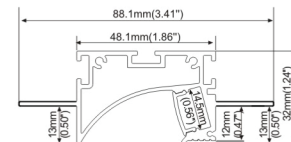

• PMMA semi-clear cover



End caps



Step 01



Step 02



Step 03



Step 04



Step 05



Step 06




Step 07



Step 08

Drywall Series

ALP094

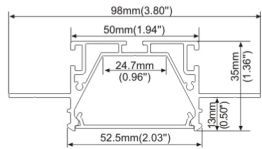


• PC diffused cover



End caps



Step 01



Step 02



Step 03



Step 04



Step 05




Step 06



Step 07

Drywall Series


ALP095

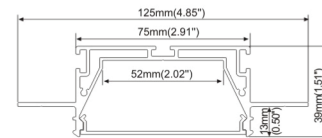

• PC diffused cover




End caps

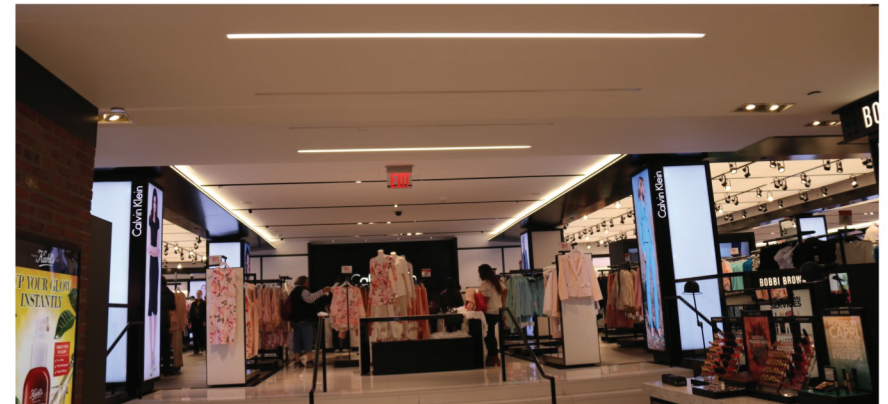

Drywall Series


ALP111-S



End caps




Clip

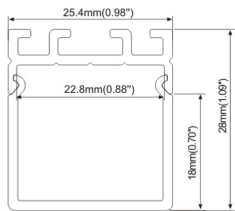


• PC diffused cover

ALP111-R




End caps

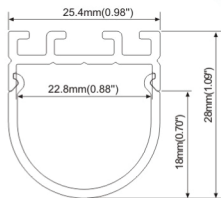


• PC diffused cover

Drywall Series

ALP118

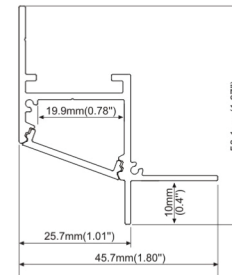


• PC diffused cover



End caps



Step 01




Click


Step 02



Step 03




Step 04



Step 05



Step 06





Step 07

Drywall Series

ALP3030-R



End caps

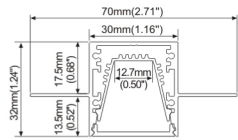
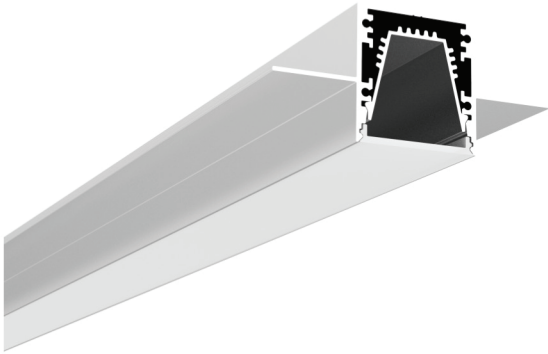


• PC frosted cover

ALP3030-R2



End caps

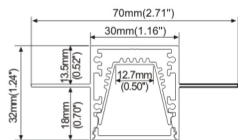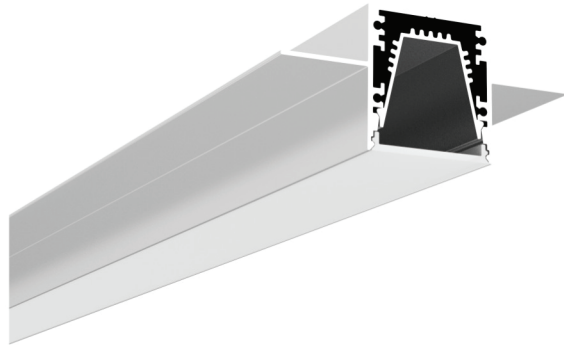

• PC frosted cover


Drywall Series

ALP3030-R


Installation methods



Step 01




Step 02




Step 03




Step 04




Step 05



Step 06



Step 07



Step 08